 


Installation of trigger for Sako x91

- 1. Remove bolt and magazine
- 2. Remove stock
- 3. Loose screw A (M6)
- 4. Pull down original trigger
- 5. Insert new trigger in place of removed original trigger und fix it with screw A (M6)
- 6. Install stock using the appropriate screws. In some cases correction on the stock for free access of the trigger must be performed.
- 7. Check the safe and correct function of the trigger and safety handle.



The trigger force is individually adjustable (increasing in clockwise direction) with screw **C** (socket screw 1,5mm) and you can select between three option of springs (part of delivery) to install: Soft, Medium, Strong

The adjustment ranges are for:

SOFT (wire diameter 0.25mm) = 75 grams to 150 grams

MEDIUM (Standard version, wire diameter 0.32mm) = 100 grams to 350 grams

STRONG (wire diameter 0.40mm) = 200 grams to 800 grams

To replace the spring loose screw **C** and replace the spring behind with SOFT, MEDIUM or STRONG spring. Tighten screw **C** so far as you have reached the trigger force you wish.

The engagement of the detent is also adjustable with screw **B** (socket screw 1,5mm, turn clockwise – less engagement).

Warning: Insufficiently or poorly adjusted detent and/or trigger are extremely dangerous and may cause serious injuries!

In all cases, it is strongly recommended that the installation and /or adjustment of the trigger be performed by well instructed specialists only. Additionally, the safe function **must** be checked after each usage and/or manual contact of the trigger system.

Company "BIX'N ANDY" assumes no liability.

