



OPERATIONS MANUAL

Congratulations on the purchase of one of the finest triggers in the world!

On behalf of both Bix'n Andy and Bullet Central, we would like to thank you for your support. If there is anything we can do to help you get the most out of your new Bix'n Andy Dakota Trigger. Please let us know!

You can visit us at www.bulletcentral.com
or call us +1 (701) 371 4444. We love hearing from you!
Sincerely, The Bullet Central Team.



INSTALLING THE DAKOTA TRIGGER

1. Unload your rifle and point it in a safe direction.
2. Remove the bolt from the action, remove old trigger and replace it with the Dakota. If using a trigger hanger, please make sure it is in the correct orientation.
3. Carefully tap in the dowel pins that are used to fix your trigger to your action. **NOTE: MAKE SURE YOU INSTALL FRONT PIN FIRST!**
4. The dowel pin holes are meant to be a tight fit. You will likely require a small hammer and parallel punch to **gently** tap in the pins. Make sure they are flush.

ADJUSTING YOUR DAKOTA TRIGGER

1. Use a 2.0mm allen key to turn screw (A).
2. For a higher pull force turn screw (A) clockwise, until pull weight is at desired level.
3. To lower pull force turn screw (A) counter clockwise, until desired pull weight is achieved.
4. Make sure the set screw isn't over tightened at the high end.
5. Also make sure that the screw is not lowered below the 1 lbs pull weight minimum.

WARNING

We advise that this trigger be installed by a **qualified gunsmith.**

When operating any firearm always practice safe shooting and only discharge the firearm when it is pointed in a safe direction with a known backstop. Never install or un-install this trigger with ammunition in the receiver.

Bix'n Andy and/or Bullet Central LLC take no responsibility for any damages to or loss of property, injury or death arising out of the use and/or misuse of this trigger.



MAINTENANCE OF YOUR TRIGGER

We suggest that you practice good maintenance which will, from time to time, include opening the trigger and cleaning it.

Please look at our videos on our website for guidance. **Do not pour lighter fluid into the trigger in an attempt to clean out debris.** This can cause a gummy residue to develop and should not be done to any trigger for that matter. Please see our website for videos on how to clean Bix'n Andy triggers

A full cleaning with a non oil based solvent (like acetone) and drying it out is necessary. The trigger is designed to run dry so never lubricate it in any way.

